 
 



№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	20340060130	Накладка рукоятки	1	11	70520220130	Нижняя рабочая рукоятка	1
2	70550100130	Рычаг включения хода	1	12	60110040000	Болт М8х50	2
3	70500232130	Верхняя рабочая рукоятка	1	13	60200470000	Шайба	6
4	70540083780	Рычаг выключения двигателя	1	14	20040070780	Гайка крепления верхней рукоятки	2
5	20030030000	Ограничитель рычага	1	15	60140080000	Гайка М8	4
6	70050120000	Кронштейн крепления тросов	1	16	20240020000	Фиксатор тросов	1
7	60060590000	Болт М6х30	2	17	60040140000	Болт М8х32	2
8	70780080000	Трос включения хода	1	18	60110030000	Болт М8х45	2
9	70810040000	Трос выключения двигателя	1	19	20350010000	Заглушка рукоятки	2
10	70230090000	Скоба крепления ручки стартера	1	20	20040050780	Гайка крепления нижней рукоятки	2

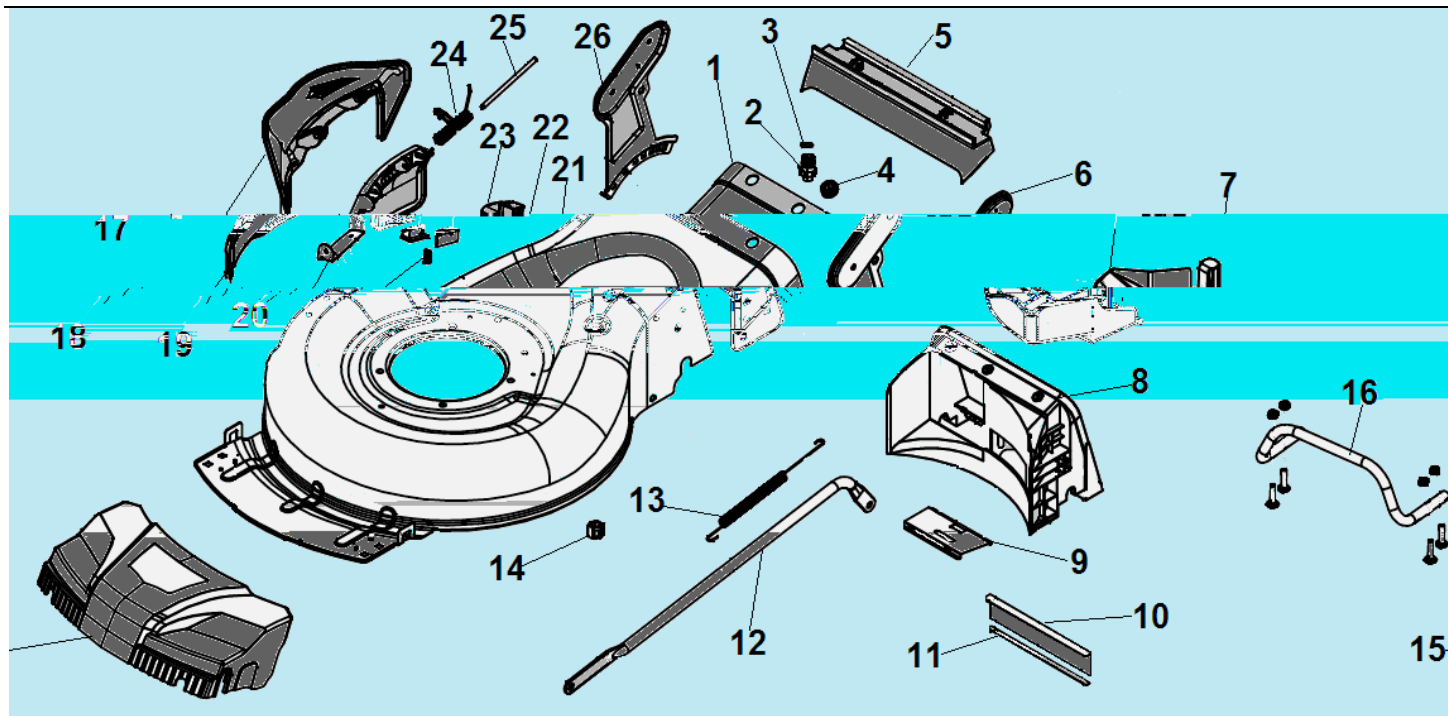

№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	70740310130	Корпус (дека)	1	14	20460030000	Гайка крепления шульца	1
2	20460010000	Штуцер для подключения шланга	1	15	20200040000	Передняя накладка деки	1
3	60370020000	Уплотнительное кольцо	1	16	70450030130	Бампер	1
4	20590020000	Втулка троса хода	1	17	20110030000	Направляющая бокового выброса	1
5	20390010000	Задняя накладка деки	1	18	20120060000	Крышка отсека выброса травы	1
6	70070110130	Левый кронштейн деки	1	19	70060050130	Кронштейн крепления крышки	1
7	20160060000	Заглушка деки	1	20	60380600000	Пружина защелки	1
8	20400060000	Задняя перегородка деки	1	21	60200580000	Прокладка	1
9	70270010000	Пластина перегородки	1	22	20490090000	Фиксатор крышки	1
10	20750040000	Защита от пыли	1	23	20650200000	Корпус фиксатора	1
11	70330010000	Пластина крепления защиты	1	24	60390060000	Пружина крышки бокового выброса	1
12	70180380000	Тяга рычага регулировки высоты колес	1	25	70030060000	Ось пружины	1
13	60410080000	Пружина тяги	1	26	70070530130	Правый кронштейн деки	1

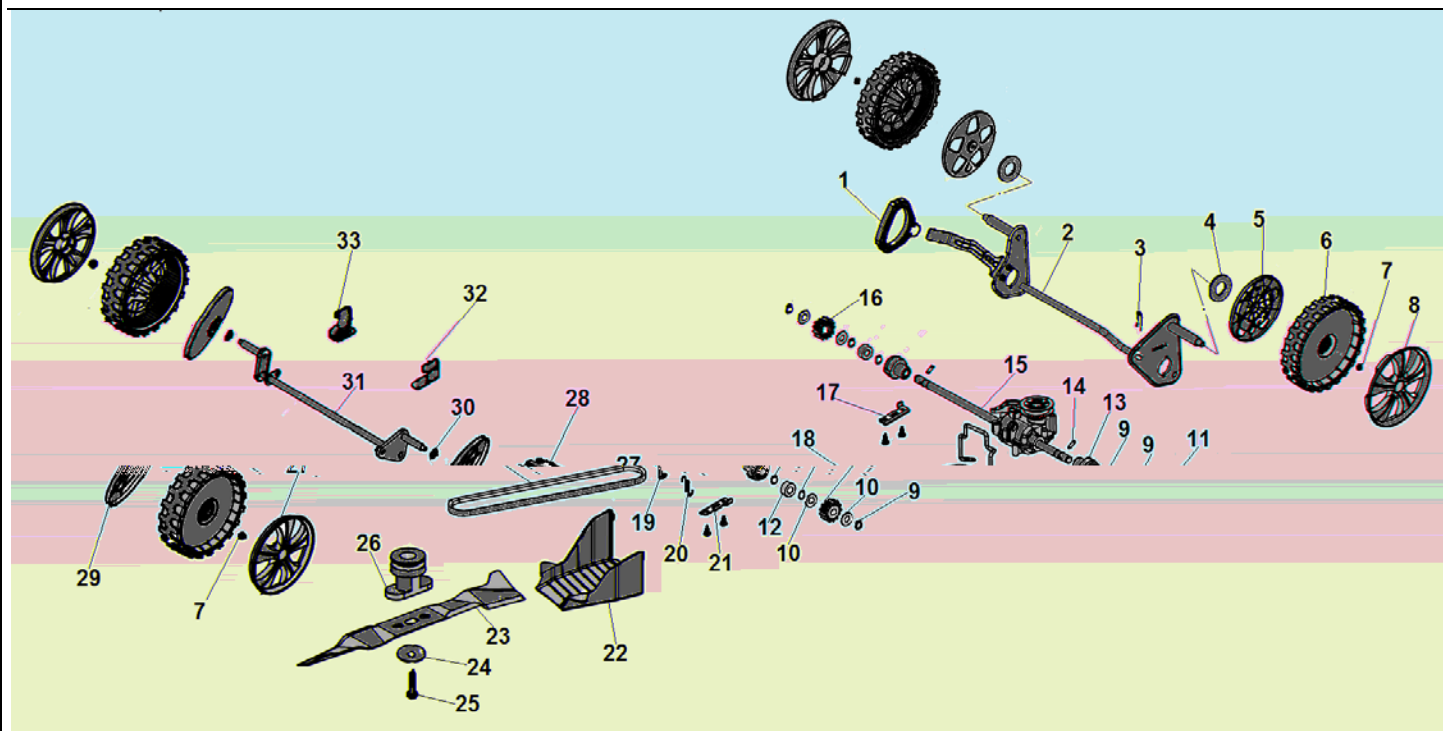



№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	20260010780	Рукоятка рычага регулировки высоты колес	1	18	60320020000	Ремень 750Li	1
2	70850670000	Ось задних колес	1	19	70050230000	Ограничитель ремня	1
3	60300030000	Шплинт	1	20	60410670000	Пружина фиксации редуктора	1
4	60200090000	Шайба 13x39,3x1	2	21	70290070000	Плата крепления редуктора	1
5	20610060000	Внутренний колпак заднего колеса	2	22	20660070000	Кожух ремня	1
6	20880152000	Заднее колесо	2	23	70131130000	Нож	1
7	60150090000	Гайка М8	4	24	70040070000	Шайба ножа	1
8	20620100230	Наружный колпак заднего колеса	2	25	60100020000	Болт 3/8-24UNF-2Вx35/10.9	1
9	60240060000	Пружинная шайба	6	26	70140460000	Адаптер ножа	1
10	21070040000	Шайба	4	27	20620090230	Наружный колпак колеса	2
11	70300200000	Шестерня привода левого колеса R	1	28	20880172000	Переднее колесо	2
12	20430140000	Втулка вала редуктора	2	29	20610070000	Внутренний колпак колеса	2
13	20430030060 /2043003044	Втулка вала редуктора	1	30	60200030000	Шайба	2
14	60290070000	Штифт шестерни колес	1	31	70840120000	Ось передних колес	1
15	70860400000	Редуктор	1	32	70470010000	Кронштейн крепления оси	1
16	70300190000	Шестерня привода правого колеса L	1	33	70470020000	Кронштейн крепления оси	1
17	70290050000	Плата крепления редуктора	1				

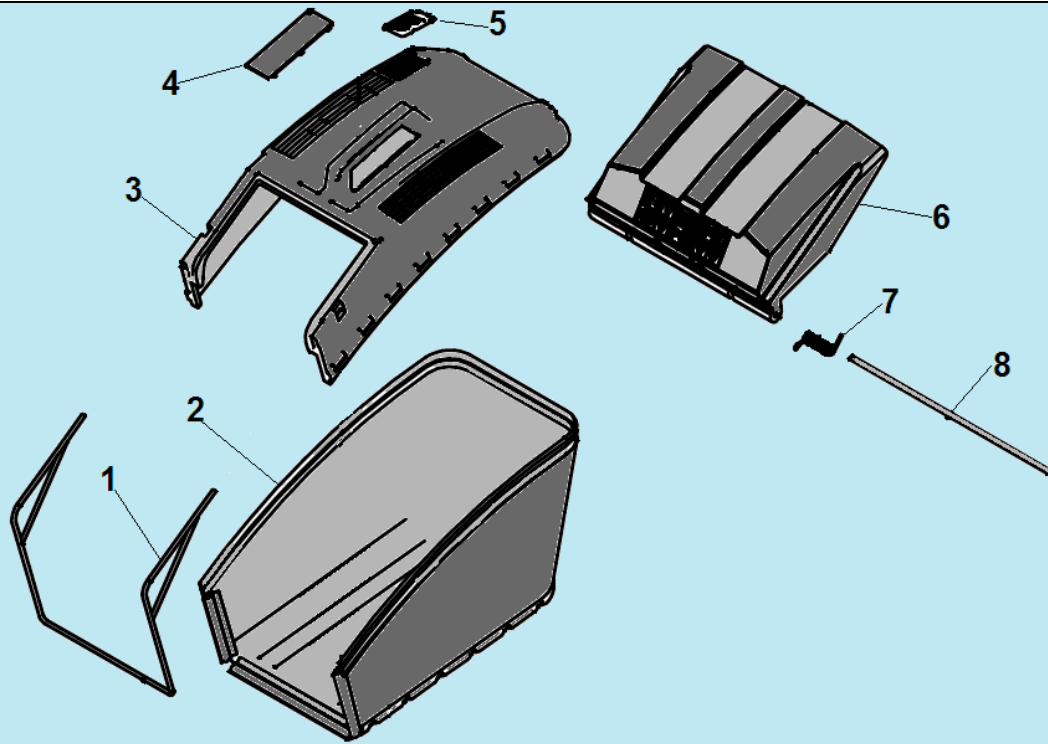 





№	Артикул	Наименование	К-во	№	Артикул	Наименование	К-во
1	70020030000	Рамка травосборника	1	5	20060010000	Индикатор наполнения травосборника	1
2	20070030032	Нижняя часть травосборника	1	6	20380050000	Крышка отсека травосборника	1
3	20080030000	Верхняя часть травосборника	1	7	60380140000	Пружина	1
4	20710010000	Накладка рукоятки травосборника	1	8	70030040000	Ось крепления крышки	1

       
104M00

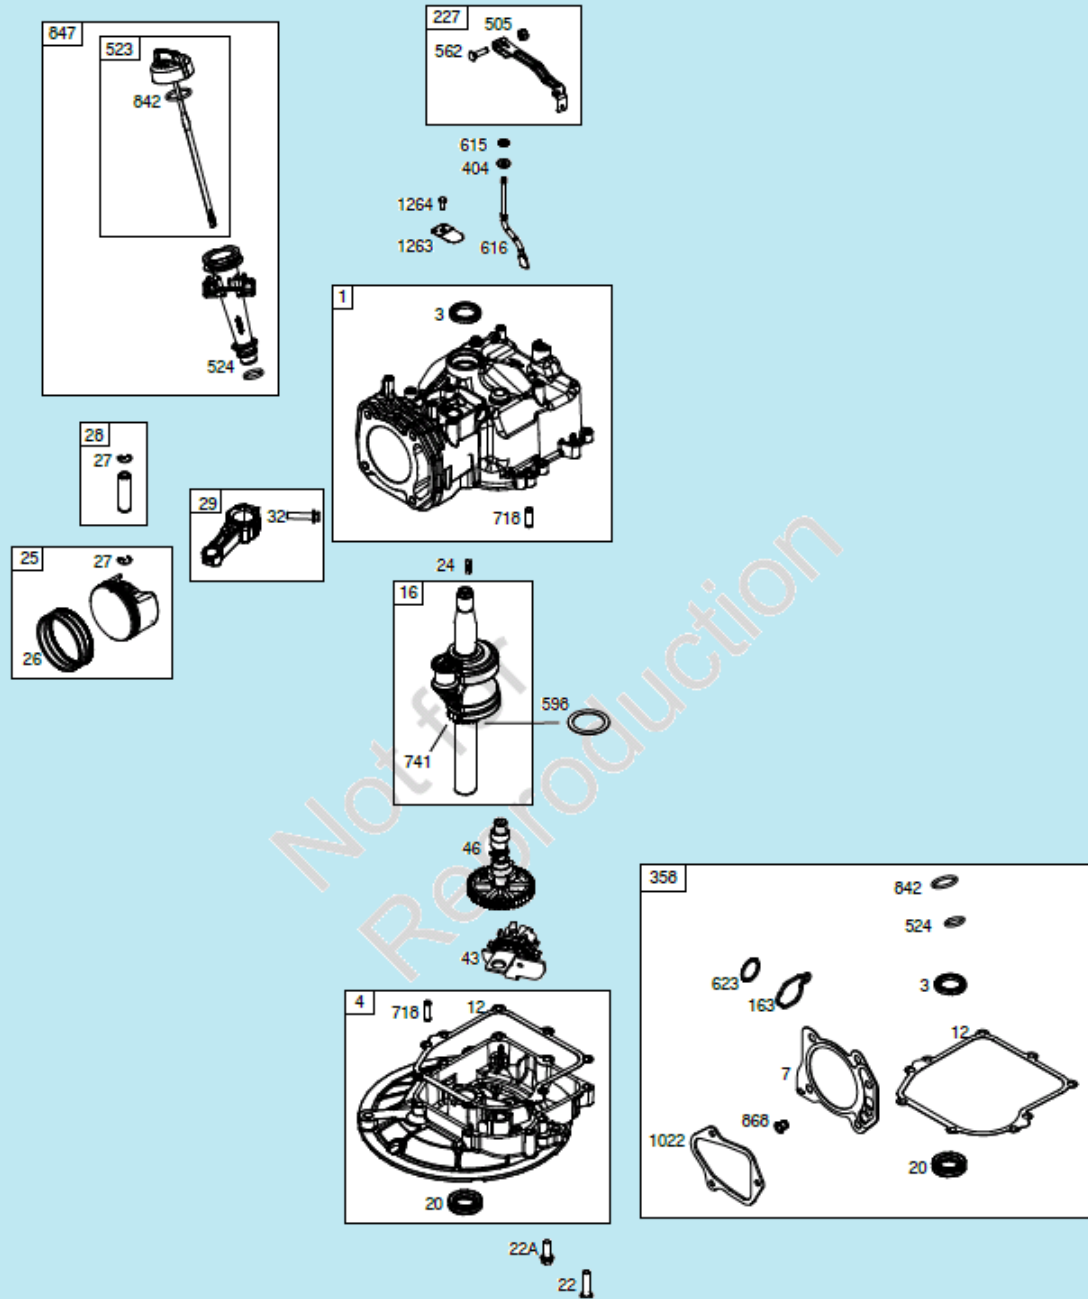 


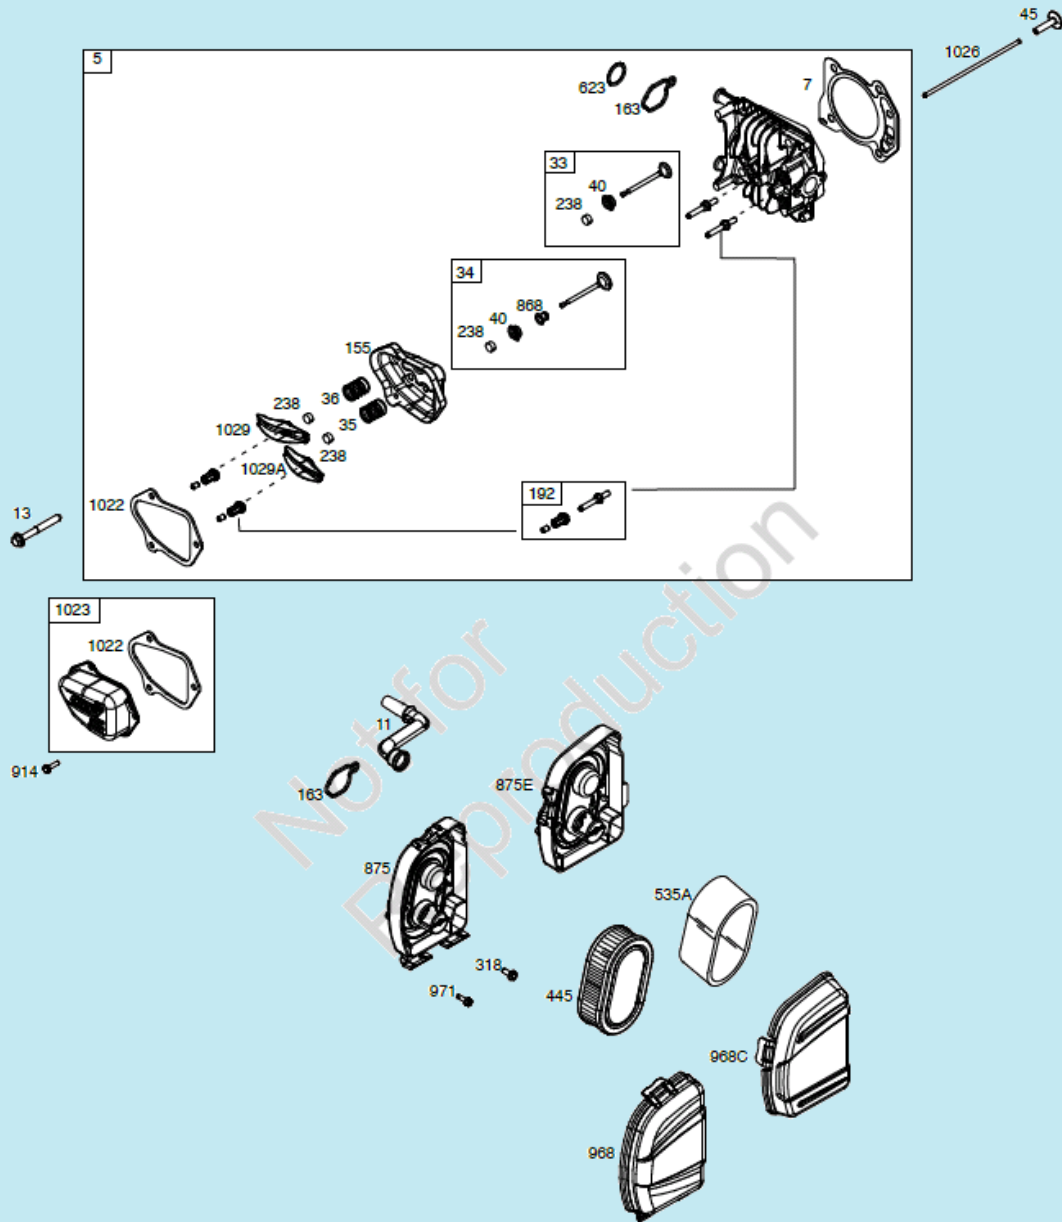 


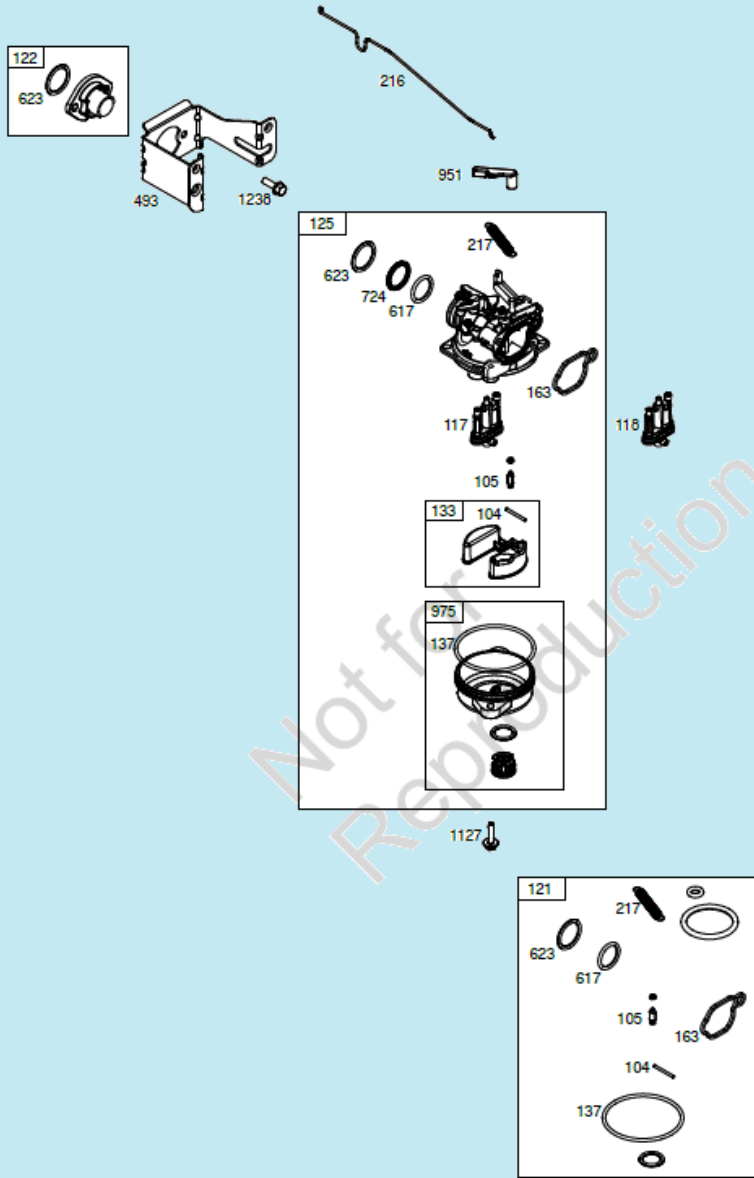

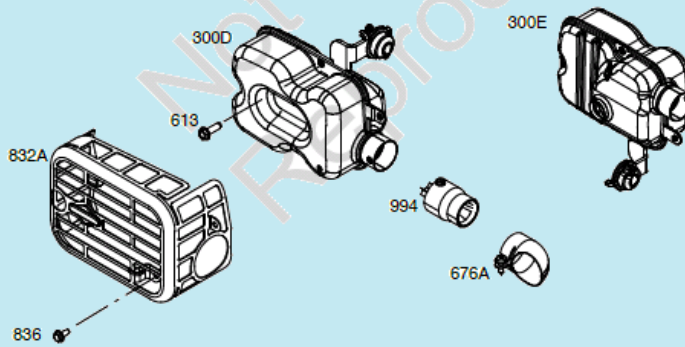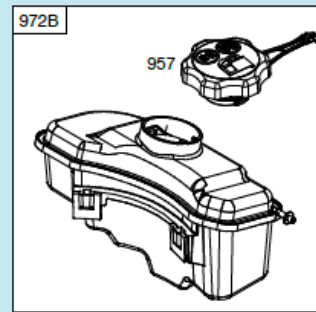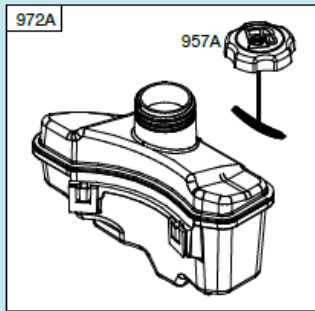

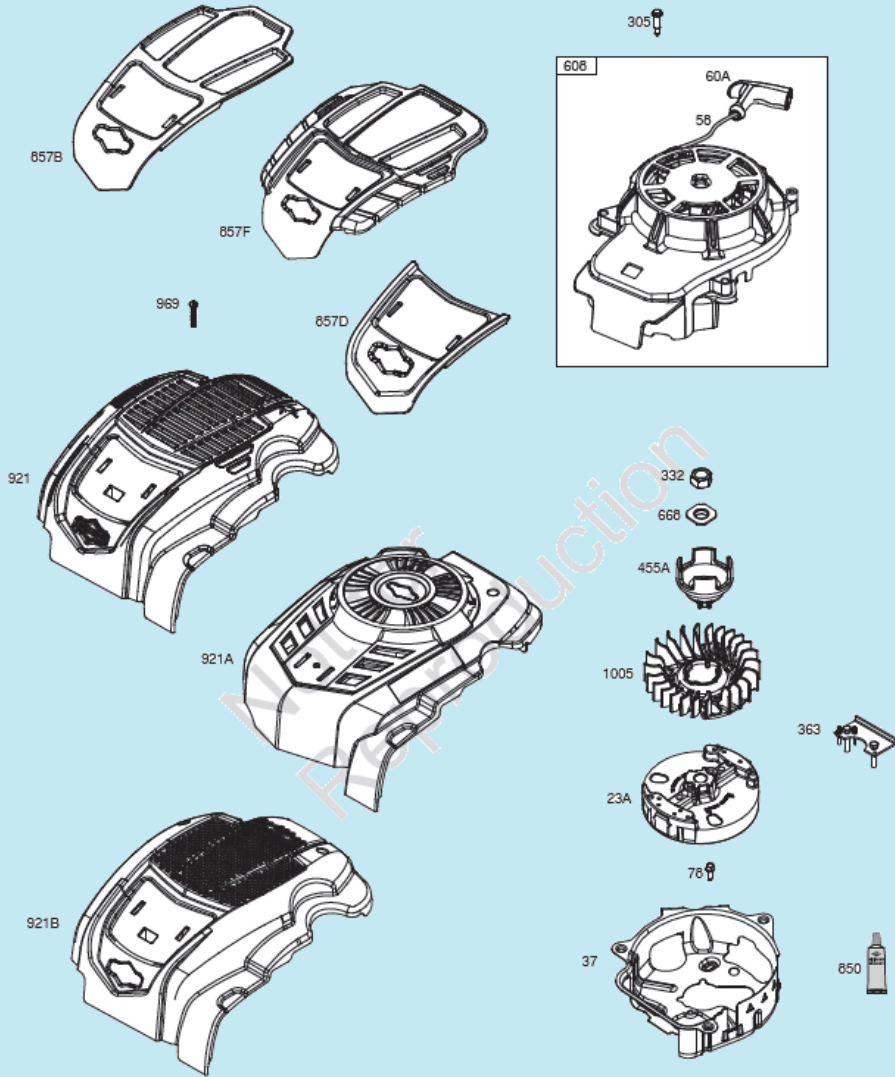

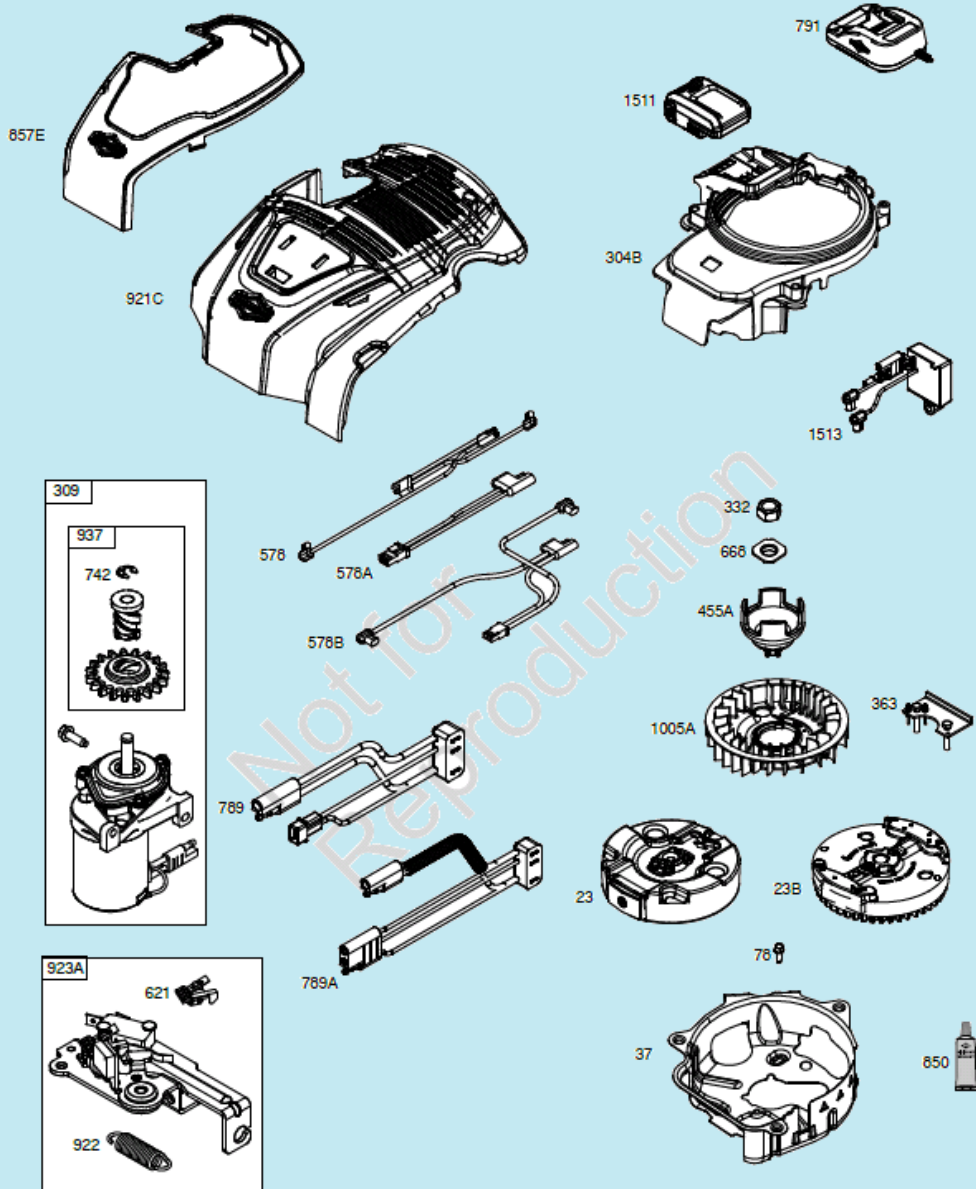

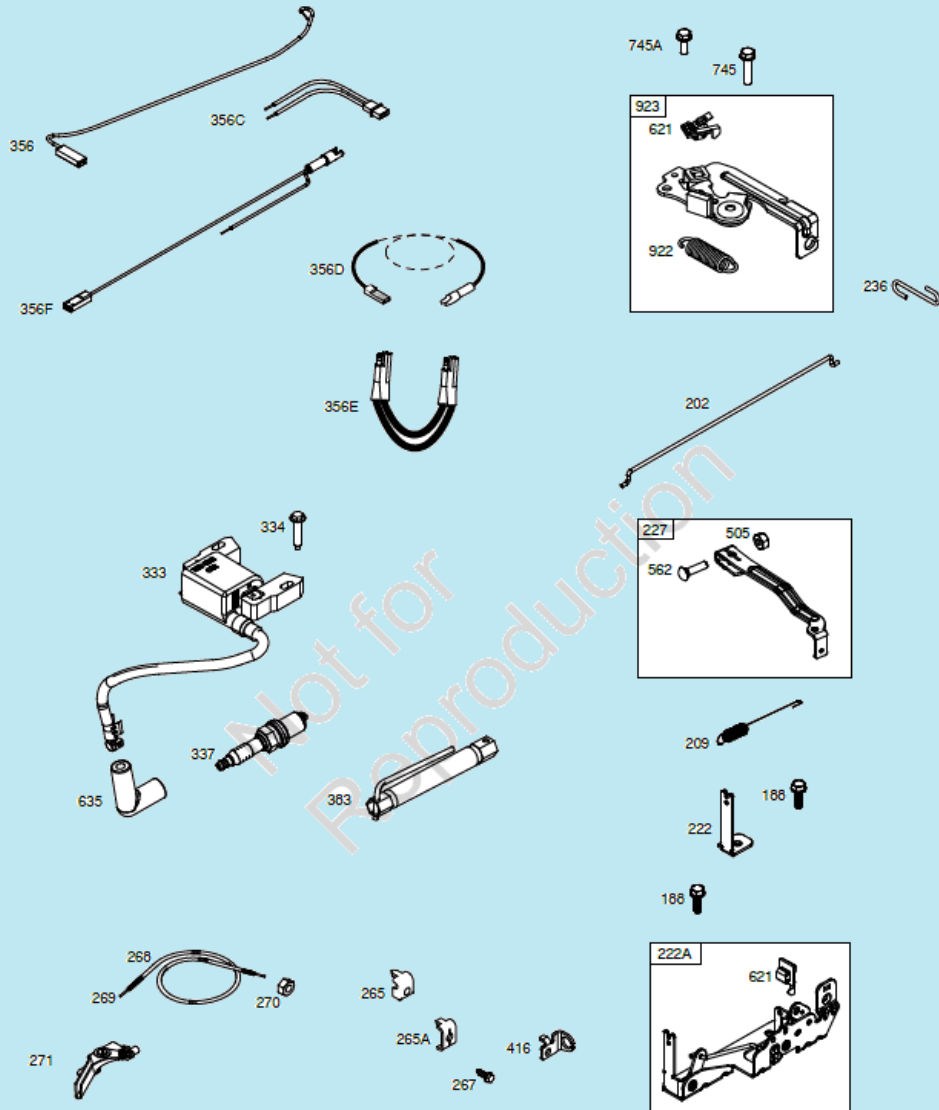

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	594100	Cylinder Assembly ----- Note ----- 595179 Cylinder Assembly Used on Type No(s). 0023, 0024, 0026, 0032, 0037, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0087, 0090, 0091, 0093, 0099, 0101, 0103, 0105, 0106, 0107, 0111, 0113, 0114, 0116, 0117.		595024	Crankshaft Used on Type No(s). 0017, 0021, 0034, 0036, 0044, 0046, 0048, 0054, 0061, 0062, 0068, 0070, 0077, 0080, 0081, 0088, 0091, 0092, 0098, 0104, 0105, 0106, 0108, 0109, 0110. 595241 Crankshaft Used on Type No(s). 0022, 0023, 0031, 0069, 0078, 0116, 0117, 0118. 595177 Crankshaft Used on Type No(s). 0039, 0052, 0083.	37	594103	Guard- Flywheel ----- Note ----- 594573 Guard- Flywheel Used on Type No(s). 0014, 0015, 0016, 0017, 0039, 0044, 0052, 0055, 0060, 0070, 0083, 0085, 0094, 0095, 0097, 0098, 0102, 0112. 595188 Guard- Flywheel Used on Type No(s). 0023, 0024, 0026, 0032, 0040, 0042, 0047, 0048, 0050, 0051, 0054, 0057, 0059, 0061, 0062, 0063, 0064, 0065, 0067, 0068, 0069, 0072, 0073, 0075, 0076, 0077, 0078, 0079, 0080, 0082, 0090, 0091, 0093, 0101, 0103, 0105, 0106, 0107, 0111, 0113, 0114, 0116, 0117. 595189 Guard- Flywheel Used on Type No(s). 0037, 0087, 0099.
3	299819s	Seal- Oil (Magneto Side)		595178	Crankshaft Used on Type No(s). 0060.			
4	594101	Sump- Engine	20	399781s	Seal- Oil (PTO Side)			
5	594091	Head- Cylinder	22	692551	Screw (Crankcase Cover/Sump)			
7	592358	Gasket- Cylinder Head	22A	590763	Screw (Crankcase Cover/Sump)			
11	590522	Tube- Breather	23	595185	Flywheel			
12	799587	Gasket- Crankcase	23A	594054	Flywheel			
13	590512	Screw (Cylinder Head)	23B	595183	Flywheel	40	594092	Retainer- Valve
16	594104	Crankshaft ----- Note ----- 594507 Crankshaft Used on Type No(s). 0010, 0028, 0040, 0043, 0051, 0056, 0082. 594572 Crankshaft Used on Type No(s). 0014, 0016, 0024, 0029, 0030, 0031, 0032, 0033, 0035, 0037, 0045, 0047, 0049, 0050, 0055, 0063, 0064, 0075, 0076, 0079, 0094, 0112.	24	222698s	Key- Flywheel	43	697799	Slinger- Governor/Oil ----- Note ----- 594560 Slinger- Governor/Oil Used on Type No(s). 0012, 0016, 0024, 0053, 0055, 0060, 0074, 0095, 0096, 0115.
			25	594099	Piston Assembly (Standard)	45	590514	Tappet- Valve
			26	594098	Ring Set (Standard)	46	594090	Camshaft
			27	691588	Lock- Piston Pin	58	591108	Rope- Starter
			28	298909	Pin- Piston	60A	281434s	Grip- Starter Rope
			29	594089	Rod- Connecting	78	793480	Screw (Flywheel Guard)
			32	691664	Screw (Connecting Rod)	104	590558	Pin- Float Hinge
			33	594095	Valve- Exhaust	105	594581	Valve- Float Needle ----- Note ----- 698537 Valve- Float Needle Used on Type No(s). 0060.
			34	594094	Valve- Intake			
			35	590532	Spring- Valve (Intake)			
			36	590532	Spring- Valve (Exhaust)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	594060	Jet- Main (Standard) ----- Note ----- 594558 Jet- Main (Standard) (Used After Code Date 00160403.) Used on Type No(s). 0074. 594060 Jet- Main (Standard) (Used Before Code Date 00160404.) Used on Type No(s). 0074.		594559	Jet- Main (High Altitude) (Used After Code Date 00160403.) Used on Type No(s). 0074. 594063 Jet- Main (High Altitude) (Used Before Code Date 00160404.) Used on Type No(s). 0074.	122	590549	Spacer- Carburetor
		594558 Jet- Main (Standard) Used on Type No(s). 0012, 0016, 0039, 0052, 0053, 0055, 0074, 0083, 0095, 0096, 0115. 595011 Jet- Main (Standard) Used on Type No(s). 0014, 0015, 0017, 0018, 0019, 0022, 0023, 0024, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0097, 0098, 0099, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0116, 0117, 0118.		594559	Jet- Main (High Altitude) Used on Type No(s). 0012, 0016, 0039, 0052, 0053, 0055, 0074, 0083, 0095, 0096, 0115. 595015 Jet- Main (High Altitude) Used on Type No(s). 0014, 0015, 0017, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0097, 0098, 0099, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0116, 0117, 0118.	125	594058	Carburetor ----- Note ----- 594529 Carburetor (Used After Code Date 00160403.) Used on Type No(s). 0074. 594058 Carburetor (Used Before Code Date 00160404.) Used on Type No(s). 0074.
118	594063	Jet- Main (High Altitude) ----- Note -----	121	590589	Kit- Carburetor Overhaul (Used Before Code Date 15030900.) ----- Note ----- 594636 Kit- Carburetor Overhaul (Used After Code Date 15030800.)			594529 Carburetor Used on Type No(s). 0012, 0016, 0039, 0052, 0053, 0055, 0074, 0083, 0095, 0096, 0115. 594926 Carburetor Used on Type No(s). 0014, 0015, 0017, 0018, 0019, 0022, 0023, 0024, 0027, 0029, 0030, 0031, 0032, 0033, 0034, 0035, 0036, 0037, 0041, 0042, 0044, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0085, 0086, 0087, 0088, 0089, 0090, 0091, 0092, 0094, 0097, 0098, 0099, 0100, 0102, 0104, 0105, 0106, 0108, 0109, 0110, 0111, 0112, 0116, 0117, 0118. 595192 Carburetor Used on Type No(s). 0060.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
133	591120	Float- Carburetor		590539	Spring- Governor	267	691044	Screw (Casing Clamp)
137	593235	Gasket- Float Bowl (Pack of 5) (Used Before Code Date 15030900) ----- Note -----			Used on Type No(s). 0024, 0029, 0031, 0032, 0041, 0042, 0043, 0051, 0052, 0068, 0076, 0077, 0080, 0081, 0091, 0092, 0104, 0105, 0106, 0110.			----- Note ----- 692577 Screw (Casing Clamp)
	594633	Gasket- Float Bowl (Pack of 5) (Used After Code Date 15030800)		590542	Spring- Governor			Used on Type No(s). 0017, 0018, 0019, 0044, 0086, 0089, 0090, 0096, 0113, 0114.
155	594093	Plate- Cylinder Head			Used on Type No(s). 0056, 0070, 0097, 0098.			799013 Screw (Casing Clamp)
163	799580	Gasket- Air Cleaner		595176	Spring- Governor	268	691025	Casing- Control Wire (Cut To Required Length)
187	791766	Line- Fuel (Cut To Required Length)			Used on Type No(s). 0060.	269	691026	Wire- Control (Cut To Required Length)
188	793480	Screw (Control Bracket)		591497	Spring- Governor	270	691027	Nut (Control Wire Casing)
192	590535	Adjuster- Rocker Arm			Used on Type No(s). 0010, 0112.	271	691028	Lever- Control
202	590517	Link- Mechanical Governor		596099	Spring- Governor	300D	594108	Muffler
209	590541	Spring- Governor ----- Note -----			Used on Type No(s). 0024.	300E	595012	Muffler
	594506	Spring- Governor	216	590547	Link- Choke	304B	595186	Housing- Blower
		Used on Type No(s). 0010, 0017, 0018, 0019, 0022, 0023, 0028, 0031, 0032, 0033, 0034, 0035, 0036, 0039, 0040, 0045, 0046, 0047, 0048, 0049, 0050, 0054, 0058, 0059, 0061, 0062, 0063, 0064, 0065, 0066, 0069, 0075, 0078, 0079, 0082, 0083, 0090, 0100, 0108, 0109, 0111, 0116, 0117, 0118.	217	590740	Spring- Choke Return	305	590586	Screw (Blower Housing)
	594538	Spring- Governor	222	590560	Bracket- Control	309	594360	Motor- Starter
		Used on Type No(s). 0012, 0016, 0053, 0055, 0074, 0095, 0096, 0115.	222A	590561	Bracket- Control	318	793480	Screw (Mounting Bracket)
			227	590520	Lever- Governor Control	332	690662	Nut (Flywheel)
			236	591292	Link- Lockout	333	595009	Armature- Magneto
			238	594097	Cap- Valve	334	691061	Screw (Magneto Armature)
			265	690798	Clamp- Casing			
			265A	691024	Clamp- Casing			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
337	594056	Plug- Spark ----- Note ----- 491055S Plug- Spark Used on Type No(s). 0001, 0008, 0009, 0018, 0019, 0022, 0023, 0024, 0029, 0030, 0031, 0032, 0041, 0042, 0043, 0045, 0046, 0047, 0048, 0049, 0050, 0051, 0052, 0054, 0058, 0059, 0065, 0066, 0068, 0069, 0072, 0074, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0088, 0093, 0094, 0096, 0100, 0104, 0106, 0110, 0115, 0118. 555737 Plug- Spark Used on Type No(s). 0018, 0019, 0022, 0023, 0024, 0029, 0030, 0031, 0032, 0041, 0042, 0043, 0045, 0046, 0047, 0048, 0049, 0050, 0051, 0052, 0054, 0058, 0059, 0065, 0066, 0068, 0069, 0075, 0076, 0077, 0078, 0079, 0080, 0081, 0088, 0090, 0091, 0094, 0096, 0100, 0104, 0105, 0106, 0110, 0111, 0116, 0117, 0118. 792015 Plug- Spark Used on Type No(s). 0017, 0024, 0033, 0034, 0035, 0036, 0044, 0056, 0061, 0062, 0063, 0064, 0070, 0090, 0091, 0092, 0105, 0108, 0109, 0111, 0112, 0116, 0117.	356	595018	Wire- Stop ----- Note ----- 692390 Wire- Stop Used on Type No(s). 0014, 0015, 0016, 0017, 0037, 0044, 0055, 0070, 0085, 0087, 0094, 0095, 0097, 0098, 0099, 0102, 0112.	601	791850	Clamp- Hose	608	594062	Starter- Rewind
			356C	796798	Wire- Stop Used on Type No(s). 0090, 0113, 0114. ----- Note ----- 596036 Wire- Stop Used on Type No(s). 0012, 0018, 0019, 0086, 0089, 0096.	613	590562	Screw (Muffler)	615	690340	Retainer- Governor Shaft
			356D	595379	Wire- Stop	616	590516	Crank- Governor	617	270344s	Seal- O Ring (Intake Manifold)
			356E	596100	Wire- Stop	621	692310	Switch- Stop	623	799581	Seal- O Ring (Carburetor Spacer)
			356F	595383	Wire- Stop	635	692076	Boot- Spark Plug	668	590546	Spacer (Flywheel)
			358	594114	Gasket Set- Engine	676A	594563	Deflector- Muffler	718	690959	Pin- Locating (Crankcase Cover/Sump)
			363	19619	Puller- Flywheel	724	697478	Retainer- Seal	741	594105	Gear- Timing (Plastic)
			383	19576s	Wrench- Spark Plug	742	93941	Retainer- E Ring	745	691146	Screw (Brake)
			404	690272	Washer (Governor Crank)	745A	690859	Screw (Brake)	789	595197	Harness- Wiring
			416	595196	Bracket- Throttle Cable	789A	595380	Harness- Wiring	791	593561	Charger- Battery (Instart) (North America) ----- Note ----- 593562 Charger- Battery (Instart) (Europe) 593576 Charger- Battery (Instart) (United Kingdom) 595887 Charger- Battery (Instart) (Australia)
			445	593260	Filter- Air Cleaner Cartridge	832A	594109	Guard- Muffler	836	690661	Screw (Muffler Guard)
			455A	593960	Cup- Flywheel	842	691031	Seal- O Ring (Dipstick Tube)			
			493	593330	Bracket- Mounting (Carburetor)						
			505	793515	Nut (Governor Control Lever)						
			523	796503	Dipstick						
			524	691876	Seal- Dipstick Tube						
			535A	595191	Filter- Air Cleaner Foam						
			562	793514	Bolt (Governor Control Lever)						
			578	595181	Wire Assembly						
			578A	595381	Wire Assembly						
			578B	594368	Wire Assembly						
			598	592587	Shim- End Play (Crankshaft or Camshaft Bearing)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	594110	Dipstick/Tube Assembly	971	590552	Screw (Air Cleaner Base to Carburetor/Throttle Body)	1029A	590527	Arm- Rocker (Intake)
850	100106	Sealant- Liquid				1036		Label- Emissions (Available From A Briggs & Stratton Authorized Dealer)
857B	594111	Trim- Blower Housing Cover	972A	595190	Tank- Fuel			
857D	596037	Trim- Blower Housing Cover	972B	594112	Tank- Fuel			
857E	595207	Trim- Blower Housing Cover	975	591492	Bowl- Float (Used Before Code Date 15030900)	1127	590554	Screw (Float Bowl to Carburetor Body)
		----- Note ----- 596103 Trim- Blower Housing Cover (Orange) Used on Type No(s). 0067, 0069, 0111.			----- Note ----- 594632 Bowl- Float (Used After Code Date 15030800)	1238	590562	Screw (Carburetor Spacer)
857F	596095	Trim- Blower Housing Cover	994	594562	Arrestor- Spark	1263	697124	Reed- Breather
868	594096	Seal- Valve (Intake)	1005	594102	Fan- Flywheel	1264	793453	Screw (Breather Reed)
875	594107	Base- Air Cleaner	1005A	595182	Fan- Flywheel	1319	794467	Label- Warning
875E	594574	Base- Air Cleaner			----- Note ----- 595184 Fan- Flywheel Used on Type No(s). 0039, 0052, 0060, 0070, 0083, 0094, 0112.	1319A	797669	Label- Warning
914	591103	Screw (Rocker Cover)	1022	595342	Gasket- Rocker Cover	1511	593559	Battery (Instart) (North America)
921	594116	Cover- Blower Housing	1023	595352	Cover- Rocker			----- Note ----- 593560 Battery (Instart) (Europe) (Australia)
921A	594550	Cover- Blower Housing	1026	590515	Rod- Push	1513	595382	Module- Starter
921B	595212	Cover- Blower Housing	1029	590526	Arm- Rocker (Exhaust)			
921C	595180	Cover- Blower Housing						
922	692135	Spring- Brake						
923	691487	Brake						
923A	595195	Brake						
937	799420	Spline- Starter						
951	591104	Lever- Choke						
957	594061	Cap- Fuel Tank						
957A	595214	Cap- Fuel Tank						
968	594106	Cover- Air Cleaner						
968C	594575	Cover- Air Cleaner						
969	594115	Screw (Blower Housing Cover)						